


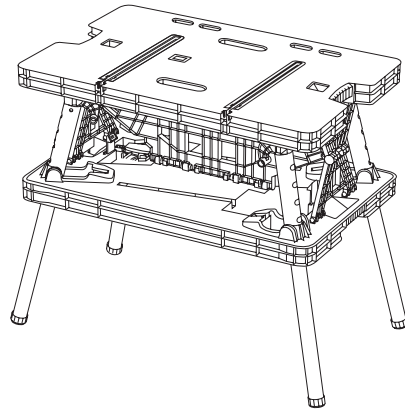

FOLDING WORK TABLE


Instruction Manual



IMPORTANT SAFETY INSTRUCTIONS

1. Do not load with more than 1000 lbs. (453 kg). Do not leave heavy loads on work surface for extended periods of time.
2. Do not apply an unbalanced load which could cause the workbench to tip over.
3. Do not use the work center as a stepladder or standing platform. Do not use the lower platform as a step.
4. Do not store workbench outdoors or in a damp location.
5. Avoid applying excessive force when clamping with the supplied clamps.
6. Be sure that the legs are fully open and the center support is in position and locked before use.
7. When using a power tool with the workbench, follow the safety instructions in the tool's instruction manual.
8. Do not mount or clamp power tools to any surface.
9. Always wear safety glasses when operating power tools.
10. Cutting or drilling into work surface may weaken supports, damaging tool or workbench.
11. Caution required when using high temperature tools (heat guns, torch, solder iron, etc.). May damage work surface and reduce clamping capability.
12. Do not store flammable liquids on the workbench.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

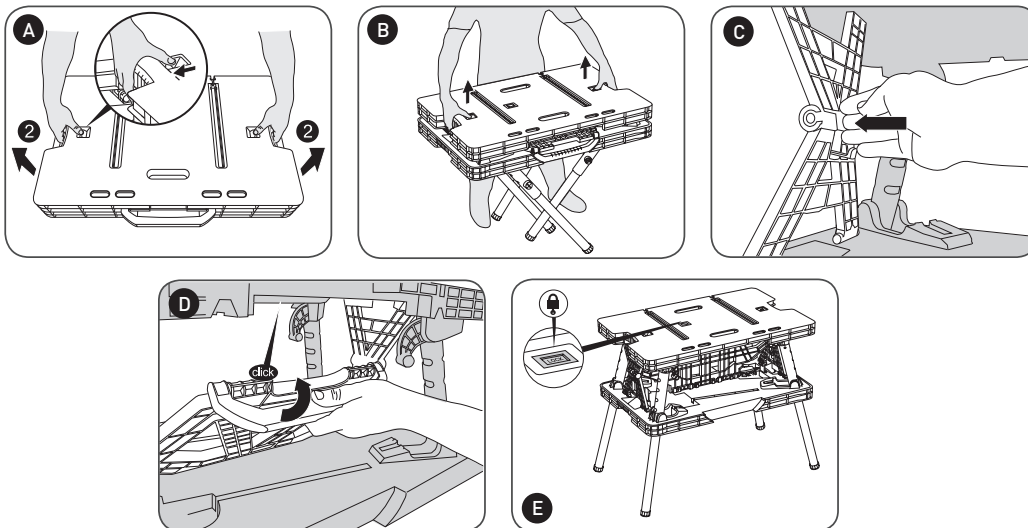





OPERATION: OPENING THE WORKBENCH

The Portable Clamping Workstation is packaged completely folded. To open:

1. Place the workbench flat on the floor.
 2. Grasp the openings on both sides of the table top and pull out on the release latches as shown in **figure A**.
- ⚠ CAUTION:** Do not pull the legs out when the workbench is in a closed position.
3. With the release latches pulled in, lift the table top. The four legs will drop down and lock into place and the side supports will lift up. (**figure B**)
 4. To lock the side supports, push out from the inside until the support locks into position (**figure C**).
- ⚠ CAUTION:** Risk of Unsafe Operation. Make sure all four legs and both side supports are locked in place.
5. After locking the side supports in place, lift the center support section by the carrying handle until you hear it “click” into place as shown in **figure D**.
 6. When the center support section is properly locked in position, the LOCK button shown in **figure E** will be visible.
- ⚠ CAUTION:** Risk of Unsafe Operation. Make sure the center support section is locked in place.

OPERATION: CLOSING THE WORKBENCH

1. Fold the center support section down and push in on the side supports to unlock them (**figure F**)
2. Reach through the openings in the table top and grasp the lower section of the bench. Pull up on the lower section to begin collapsing the legs. (**figure G**)
3. Lower the unit to the ground as shown in **figure H**.
4. Once the unit is flat on the ground, press down on the table top to place the unit into its fully closed position as shown in **figure I**.

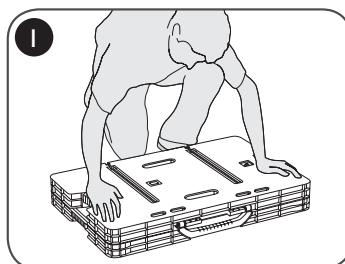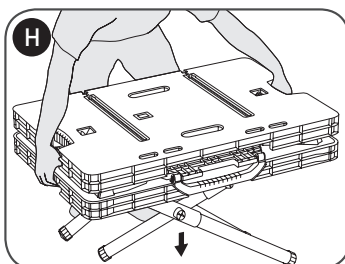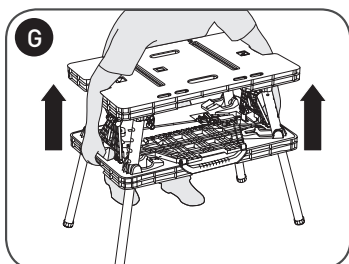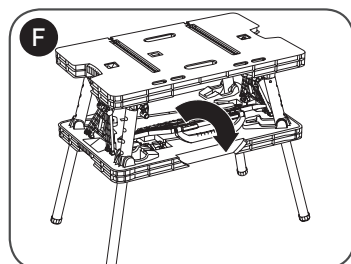

ADJUSTABLE CLAMPS

The two adjustable clamps can be used in both a vertical and horizontal mode. The long channels in the table top allow the clamps to be anchored in a stationary horizontal position. The shorter slots in the table top allow for the clamps to be used in a vertical position (**figure J**). **J1** through **J6** illustrate how to use the clamps in both horizontal and vertical modes.

J1 - To expand the opening of the clamp jaws, press in on the release lever and move the jaw as shown. The jaw that is attached to the handle can also be moved in the same manner or by squeezing and releasing the front handle.









J2 - Line up the round post on the end of the clamp bar with the mating openings on both sides of the main slot in the tabletop as shown.

J3 - To lock the clamp in a horizontal position, squeeze the front handle and line up the round protruding tabs with the mating openings in the tabletop (behind the openings mentioned in **J2** above).

J4 - With the clamp in a fully horizontal position, release the front handle to lock the clamp in place. (To remove the clamp, squeeze the handle and lift up.)

J5 - Depress the release lever and move the front jaw into position against the material to be clamped. Squeeze the front handle to apply pressure.

J6 - To clamp vertically, insert the clamp through the slot in the tabletop as shown.

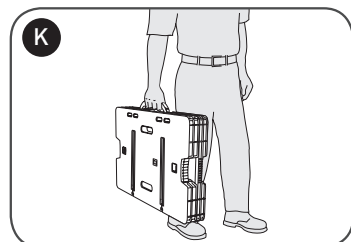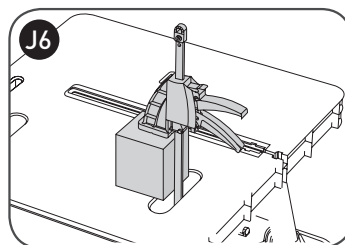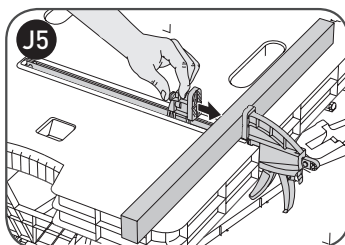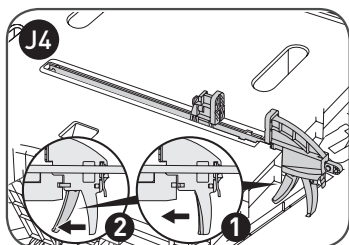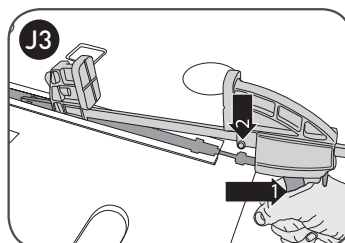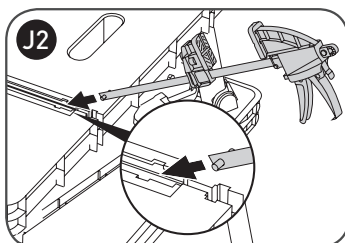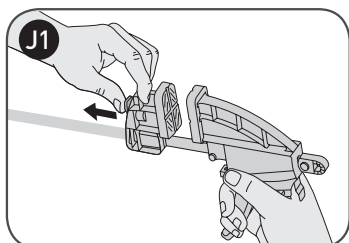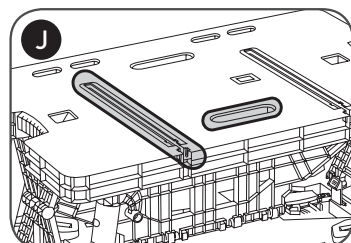

TRANSPORTING

Carry the unit by the convenient carrying handle as shown in **figure K**.

MAINTENANCE

Use only mild soap and damp cloth to clean the tool. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.

Patented

CUSTOMER SERVICE INFORMATION

Keter North America, 11495 North Pennsylvania, Suite 110, Carmel, Indiana 46032 U.S.A. **1(888) 374-4262**

THANK YOU FOR CHOOSING KETER
WWW.KETER.COM